CV Joint Assembly Removal Tool

Art. Nr: PT5253

Features

- For Removing the CV joints on front-wheel drive cars.
- No need to remove the entire drive axle from the vehicle
- No need to use a hammer avoid damage to drive axle.

Application

- 1. Lose the nut of the drive shaft.
- 2. Put the CV joint puller over the drive shaft.
- 3. Fix the CV joint puller with the traverse.
- Mount the nut of the drive shaft and actuate it with a suitable tool, until you separate the joint from the drive shaft.



