

## Master Bearing Race and Seal Driver

Art. Nr: PT5358

### Features

- All in one design, eliminating the need for a driver and several different heads.
- 3-stepped jaws quickly adjust to accommodate bearing races and seals from 18mm ~ 90mm.
- Can be used on most vehicles, including motorcycles.
- Step 1 : 18mm~53mm (0.708"~2.086")  
Step 2 : 41mm~76mm (1.614"~2.992")  
Step 3 : 54mm~90mm (2.125"~3.543")



### Instructions



1) Loosen the screw, and then turn the dial to expand the jaws.



2) The face of the jaws seat against the race or seal.



3) Tighten the screw.



Helps reduce damage to both race and axle housing.



4) Place the race or seal in the mouth of the housing.



5) Tap the driver handle to force the race or seal into place.



6) Done